

Studio Flash Diagram (Front)

Umbrella Screw

Tighten or loosen this screw when attaching an umbrella.

Note: Never touch the Flash Tube.



Umbrella Hole

Allows for the placement of a reflective umbrella.

Flash Tube

Emits light when flash is engaged and synched with a camera.

Modeling Lamp

Emits light to show a preview of the final image.

Holding Fingers

Provide grip when attaching accessories to the flash unit.

Studio Flash Diagram (Back)

Antennae

Releases holding fingers to mount accessories onto the flash unit.



Flash Power Slide

Controls flash power from full power to 1/32.

Power Button

Power Plug-in

Connect power cable or CyberSync Transmitter.

Stand Mount Tightening Screw

Tighten this screw to mount flash unit to stand.

Positioning Ratchet Arm

Changes the angle of the flash unit when loosened.

Studio Flash Diagram (Back Detail)

SYNC

Insert sync cable to fire flash with camera and CyberSync unit.

SLAVE

Indicates slave mode when illuminated.

REMOTE

Connect a remote to control flash functions without using back panels.



Model Lamp Controls

ON

Turns modeling lamp on.

TRACK

Modeling lamp dims and brightens as power increases and decreases.

CYCLE

Pressing this button activates modeling lamp to visually indicate the flash unit's recycle status. The modeling lamp brightens when the unit is ready.

Flash Controls

OK

Flash is fully recycled (at full power from last flash) and is ready to fire.

DUMP

Shows flash charged at higher power when illuminated. When flash reduces power to desired strength, light turns off.

TEST

Press to test flash.